For Firmware 9.0.9

The BurnBox Hellcat is an electronic plug-in device for the following vehicles:

2015-Present Dodge Charger & Dodge Challenger

Hellcat

#### **Firmware Updates**



New firmware is available periodically, always free and posted to the Z Automotive

website. The device may not ship with the latest firmware, so use ZPU (Z Automotive Programming Utility), also on the website. to install the firmware over USB.

#### What's in the box?



Z Automotive cannot be held responsible for misuse or consequential damages. If you are in doubt, email support@zautotech.com. Please be aware that modifying your vehicle in any way can affect your vehicle's warranty, longevity, handling, etc.
Please use with caution, and AT YOUR OWN RISK.

USING THE LIGHT SHOW FEATURE ON PUBLIC ROADS: IMPERSONATING A POLICE OFFICER IS A FELONY. LIGHT SHOW IS INTENDED FOR CAR SHOW/TRACK/OFF ROAD USE ONLY.

Z Automotive is in no way affiliated with FCA.

Protected by US Patents 15/441,476 and 15/441,467

### Installation

2015-2017 Simply plug the **BurnBox** into the **OBD2** diagnostic port under the dashboard, above the parking brake. (A)





2018-Present Plug the BurnBox into the required **Z Automotive Double-Bypass (B)** Click here for the install guide.

The module will shut off 30 seconds after the vehicle goes to sleep or if the battery voltage dips below 11v No need to unplug it!

# Operation

The BurnBox's features are accessed ONLY from the steering wheel commands described below

## **Function**

#### **Line Lock**

The BurnBox Hellcat will use the factory ABS solenoids to lock the front wheels for a burnout. It can only be activated when the vehicle is at a full stop and at idle.

#### **Cooldown Mode**

The BurnBox Hellcat will spoof a high temperature to activate engine fans and/or intercooler pump, which can be helpful at the track. The ignition needs to be ON with the engine OFF.

**Light Shows** 

The BurnBox Hellcat will flash the vehicle's lights in 6 different patterns - for use off-road. Contact support for information about inmotion use.

See Light Show Configuration Guide for custom Light Shows.

Map ACC Near, ACC Far, or AUX **Buttons** to perform the functions above. The dash menu must be set to AUDIO.

## **Activation**

- ⟨ (HOLD) + CRUISE "+" (TAP) OR Remapped Cruise/AUX button (HOLD)
- Wait for ABS light on dash and "Line Lock ON" **EVIC message** (visible only from AUDIO screen)
- PUMP BRAKE TO BUILD HOLDING PRESSURE
- PRESS GAS TO BREAK REAR WHEEL TRACTION
- RELEASE 

  ✓ OR REMAP TO RELEASE LINE LOCK

Cycle Fan/IC/IC + Fan/Off ► (HOLD) + CRUISE "CANC" (TAP)

Remapped Button (TAP)

#### FROM KEYFOB

Start: Unlock, Unlock, Lock, Unlock Next show: Unlock End show: Lock

FROM STEERING WHEEL

Start: HI-BEAM STALK ON (Forward) + CRUISE "+" (TAP)

Next show: CRUISE "+" (TAP)

End show: HI-BEAM STALK OFF (Back)

**FROM REMAP** 

Start/Stop: Remapped Button (TAP)

#### **Button Remap**

(HOLD) + Button to Remap (TAP) until you see the function or Light Show you want, then release both buttons).

Remember to tap only the remapped button to activate the function.