

NO LIMITZ

Installation Guide

For 2015-2024 Dodge Challenger



NoLimitz User Guide.

For the full list of features with operating instructions, click here or scan the QR code for the



Z AUTOMOTIVE
Electronic Performance Modifications

1



The **Z Automotive NoLimitz** bypasses many of the “nanny systems” present on your vehicle, allowing you to customize your vehicle’s performance for power or safety and increase security by requiring a PIN code and blocking key pairing. This guide will walk you through installing the device on your 2015-2024 Dodge Challenger. Note that these steps are not universal and pertain only to the listed vehicles.

What’s in the box?



• wire harness

• electronics module

Tools Needed:

- plastic pry bar (optional)
- very thin flat head screwdriver




- Remove the tray to the right of the shifter.
- Reach into the opening and pull up to begin removing the center console bezel and HVAC controls.
- Pull up the sides and turn the panel over to reveal the HVAC connector (A) on the back as well as the opening you’ll utilize in step 3. (B)




- Unplug the connector by pressing the tab and pulling straight out.
- Plug the connector into the matching female end on the kit’s wire harness.
- Plug the male connector on the wire harness into the HVAC control panel and set it aside.



- Thread the harness through the opening from step 1 and out the small gap leading into the passenger footwell.
- Note the fabric kick panel to the right of that opening, below the glove box. (A)

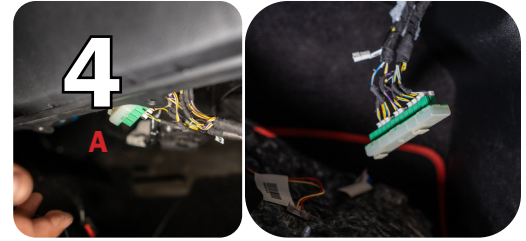

- Pull the fabric kick panel down to reveal the green STAR connector. (A)
- Slide the STAR connector to the left to pull it down and access the plugs.

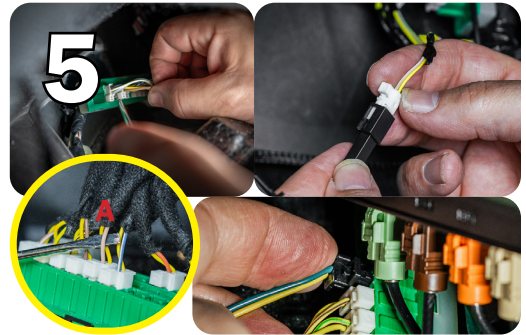

- Remove the STAR connector plug with the beige and yellow wires (A), by wedging a flathead screwdriver into the gap above the green plastic to depress the latch and pull straight out.
- **NOTE:** The brown wire looks very similar, be sure you’re looking at the beige one.
- Connect the plug to the matching female port on the NoLimitz wire harness, then plug the matching male connector on the harness to any open port on the STAR connector.



- Connect the NoLimitz electronics module to the wire harness.




7



Before proceeding to the next step, test the functionality of your NoLimitz. [Click here](#) or scan the QR code to download the NoLimitz User Guide.

8

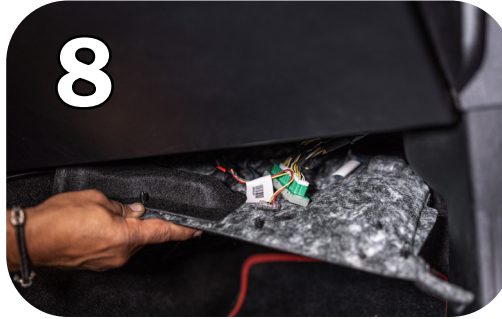

- **Finalize the NoLimitz installation by reseating the STAR connector block, tucking the the NoLimitz wire harness away and replacing the kick panel by reversing **STEP 8** and snapping the center panel back into place by reversing **STEP 1**.**

Z Automotive cannot be held responsible misuse or consequential damages.

If you are in doubt, email support@zautotech.com.

Please be aware that modifying your vehicle in any way can affect your vehicle's warranty, longevity, handling, etc.

Please use with caution, and AT YOUR OWN RISK.

USING THE LIGHT SHOW FEATURE ON PUBLIC ROADS: IMPERSONATING A POLICE OFFICER IS A FELONY. LIGHT SHOW IS INTENDED FOR CAR SHOW/TRACK/OFF ROAD USE ONLY.

Z Automotive is in no way affiliated with FCA.

Protected by US Patents

10,885,039; 10,759,328; 10,431,946; 10,266,102; 9,937,850; 9,849,826;
and other patents pending.