

NO LIMITZ

Installation Guide

For 2015-2024 Dodge Charger



For the full list of features with operating instructions, [click here](#) or scan the QR code for the NoLimitz User Guide.



Z AUTOMOTIVE
Electronic Performance Modifications

1



The **Z Automotive NoLimitz** bypasses many of the “nanny systems” present on your vehicle, allowing you to customize your vehicle’s performance for power or safety and increase security by requiring a PIN code and blocking key pairing. This guide will walk you through installing the device on your 2015-2024 Dodge Charger. Note that these steps are not universal and pertain only to the listed vehicles.

What’s in the box?



- wire harness

- electronics module

Tools Needed:

- plastic pry bar
- very thin flat head screwdriver
- philips head screwdriver



- Remove the trays in front of and to the right of the shifter to make room to pull up the shifter bezel.



- Lift from the left and pull up the bezel around the shifter.



- Use a plastic pry tool to lift up the shifter console
- Slide it to the side to reveal the two screws securing the lower tray bay (A - only the right-hand screw is pictured) and an opening you’ll utilize in step 7. (B)



- Unscrew the left and right screws on the empty bay below the HVAC control panel and remove it. (Only the right-hand screw is pictured.)





- Use a plastic pry bar to pop out the HVAC control panel, revealing the plug on the back.



- Unplug the connector by pressing the tab and pulling straight out.
- Plug the connector into the matching female end on the kit’s wire harness.
- Plug the male connector on the wire harness into the HVAC control panel and set it aside.




- Thread the harness through the opening from step 3 and out the small gap leading into the passenger footwell.
- Note the fabric kick panel to the right of that opening, below the glove box. (A)

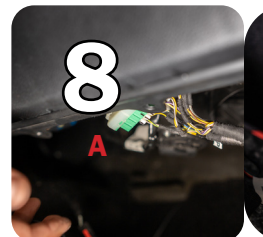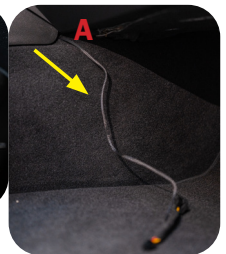

- Pull the fabric kick panel down to reveal the green STAR connector. (A)
- Slide the STAR connector to the left to pull it down and access the plugs.



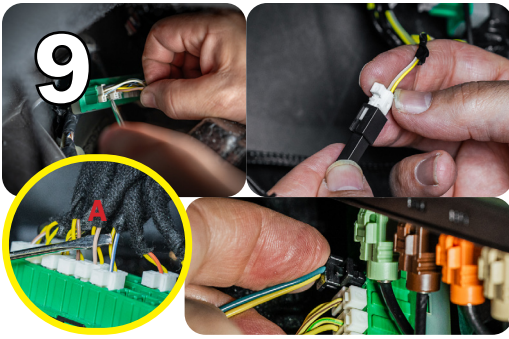

- Remove the STAR connector plug with the beige and yellow wires (A), by wedging a flathead screwdriver into the gap above the green plastic to depress the latch and pull straight out.

- **NOTE:** The brown wire looks very similar, be sure you're looking at the beige one.

- Connect the plug to the matching female port on the NoLimitz wire harness, then plug the matching male connector on the harness to any open port on the STAR connector.



- Connect the NoLimitz electronics module to the wire harness.



- **Finalize the NoLimitz installation by reseating the STAR connector block, tucking the the NoLimitz wire harness away and replacing the kick panel by reversing STEP 8 and replacing all center console pieces by reversing STEPS 5, 4, 3, 2 and 1.**

11

Before proceeding to the next step, test the functionality of your NoLimitz. [Click here](#) or scan the QR code to download the NoLimitz User Guide.

Z Automotive cannot be held responsible misuse or consequential damages.

If you are in doubt, email support@zautotech.com.

Please be aware that modifying your vehicle in any way can affect your vehicle's warranty, longevity, handling, etc.

Please use with caution, and AT YOUR OWN RISK.

USING THE LIGHT SHOW FEATURE ON PUBLIC ROADS: IMPERSONATING A POLICE OFFICER IS A FELONY. LIGHT SHOW IS INTENDED FOR CAR SHOW/TRACK/OFF ROAD USE ONLY.

Z Automotive is in no way affiliated with FCA.

Protected by US Patents

10,885,039; 10,759,328; 10,431,946; 10,266,102; 9,937,850; 9,849,826;
and other patents pending.